 




## Replace Cover

 
1. Replace cover by positioning top of cover on studs on top of mounting base and tipping bottom of cover toward wall. Push bottom of cover firmly against wall.

**NOTE:** Space between cover and wall must be the same on four sides.

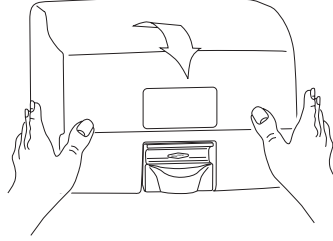


2. To tighten two cover bolts, insert Allen wrench into holes on bottom of cover. Make sure wrench fits into head of cover bolts and turn COUNTERCLOCKWISE until bolts are tightened.

**NOTE:** Do not overtighten cover bolts; overtightening cover bolts may damage enamel finish.

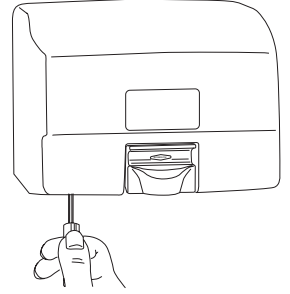

## Check Dryer Operation

 1. **For TouchButton Hand and Hair Dryers:** Turn electrical power supply on. Touch the chrome-plated touchbutton once and dryer should turn on. Touch the touchbutton again after a few seconds and dryer should stop. If left on, Hand Dryers will shut off automatically after 30 seconds; Hair Dryers will shut off after 80 seconds.
2. **For AutoPilot Hand Dryers:** Turn electrical power supply on. Position hands under nozzle and dryer should turn on. Remove hands from under nozzle and dryer should stop.

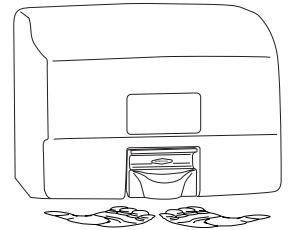

## Maintenance

**WARNING: MOTOR LAMINATIONS ARE LIVE. TURN ELECTRICAL POWER SUPPLY OFF BEFORE DOING ANY MAINTENANCE OR SERVICE TO DRYER. DRYER MUST NOT BE OPERATED UNLESS COVER IS IN PLACE.**

1. Exterior of cover should be cleaned with a damp cloth to remove dust and surface dirt. Do not use abrasive agents or solvents as they may permanently damage surface of cover.
2. At least once every 6 months remove cover. Using a small brush or vacuum, clean out buildup of dust and lint from air-intake grille and baffle.

**NOTE:** if dryer is installed where there is a lot of dust and dirt in the air, the interior of the dryer should be cleaned out more frequently.

## Warranty

**IMPORTANT**

**LIMITED WARRANTY**

**SAVE**

Installation Date: \_\_\_\_\_

Serial No(s).: \_\_\_\_\_

Installation Address: \_\_\_\_\_

Telephone No.: \_\_\_\_\_

The Bobrick Dryer of the serial number(s) indicated herein, and all parts (except motor brushes) are warranted to the original owner of the installed unit for ten years from date of original purchase for AutoPilot No-Touch and TouchButton hand and hair dryers and five years for Model B-709 hand dryer, against defects in factory workmanship or material under normal use and service. \*

\*Motor brushes shall be warranted for three years from date of purchase. This warranty is limited to repair or exchange of defective \_\_\_\_\_ parts at the option of Bobrick Washroom Equipment, Inc.

**THIS WARRANTY DOES NOT COVER ACCIDENTAL DAMAGE, IMPROPER HANDLING OR INSTALLATION, OR REPAIRS MADE BY UNAUTHORIZED PERSONS, AND SPECIFICALLY EXCLUDES CLAIMS FOR INDIRECT, ACCIDENTAL OR CONSEQUENTIAL DAMAGES TO PROPERTY. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE SAME DURATION OF THE ABOVE WARRANTY.**

Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

\* Normal service constitutes performing the following preventive maintenance procedures at six-month intervals.

**A. Remove cover and clean any lint, dust or grease from air-intake grille and baffle from behind air-outlet nozzle.**

**B. Visually inspect motor brushes to insure remaining brush length is a minimum of 1/2 inch (12.7mm).**

**Labor costs for preventive maintenance shall be at owner's expense.**

For repair or exchange of defective part, send the part, together with installation date and serial number, to BOBRICK.